




FAST FIX INTERNAL WALL SCREW

The FastFix™ Internal Wall Screw (IWS) takes the time and labour out of tedious L Bracket connections, replacing it with a smart and fast compliant connection saving you time and money

SCREW LOCATES EASILY SO IT'S ALWAYS CENTRED

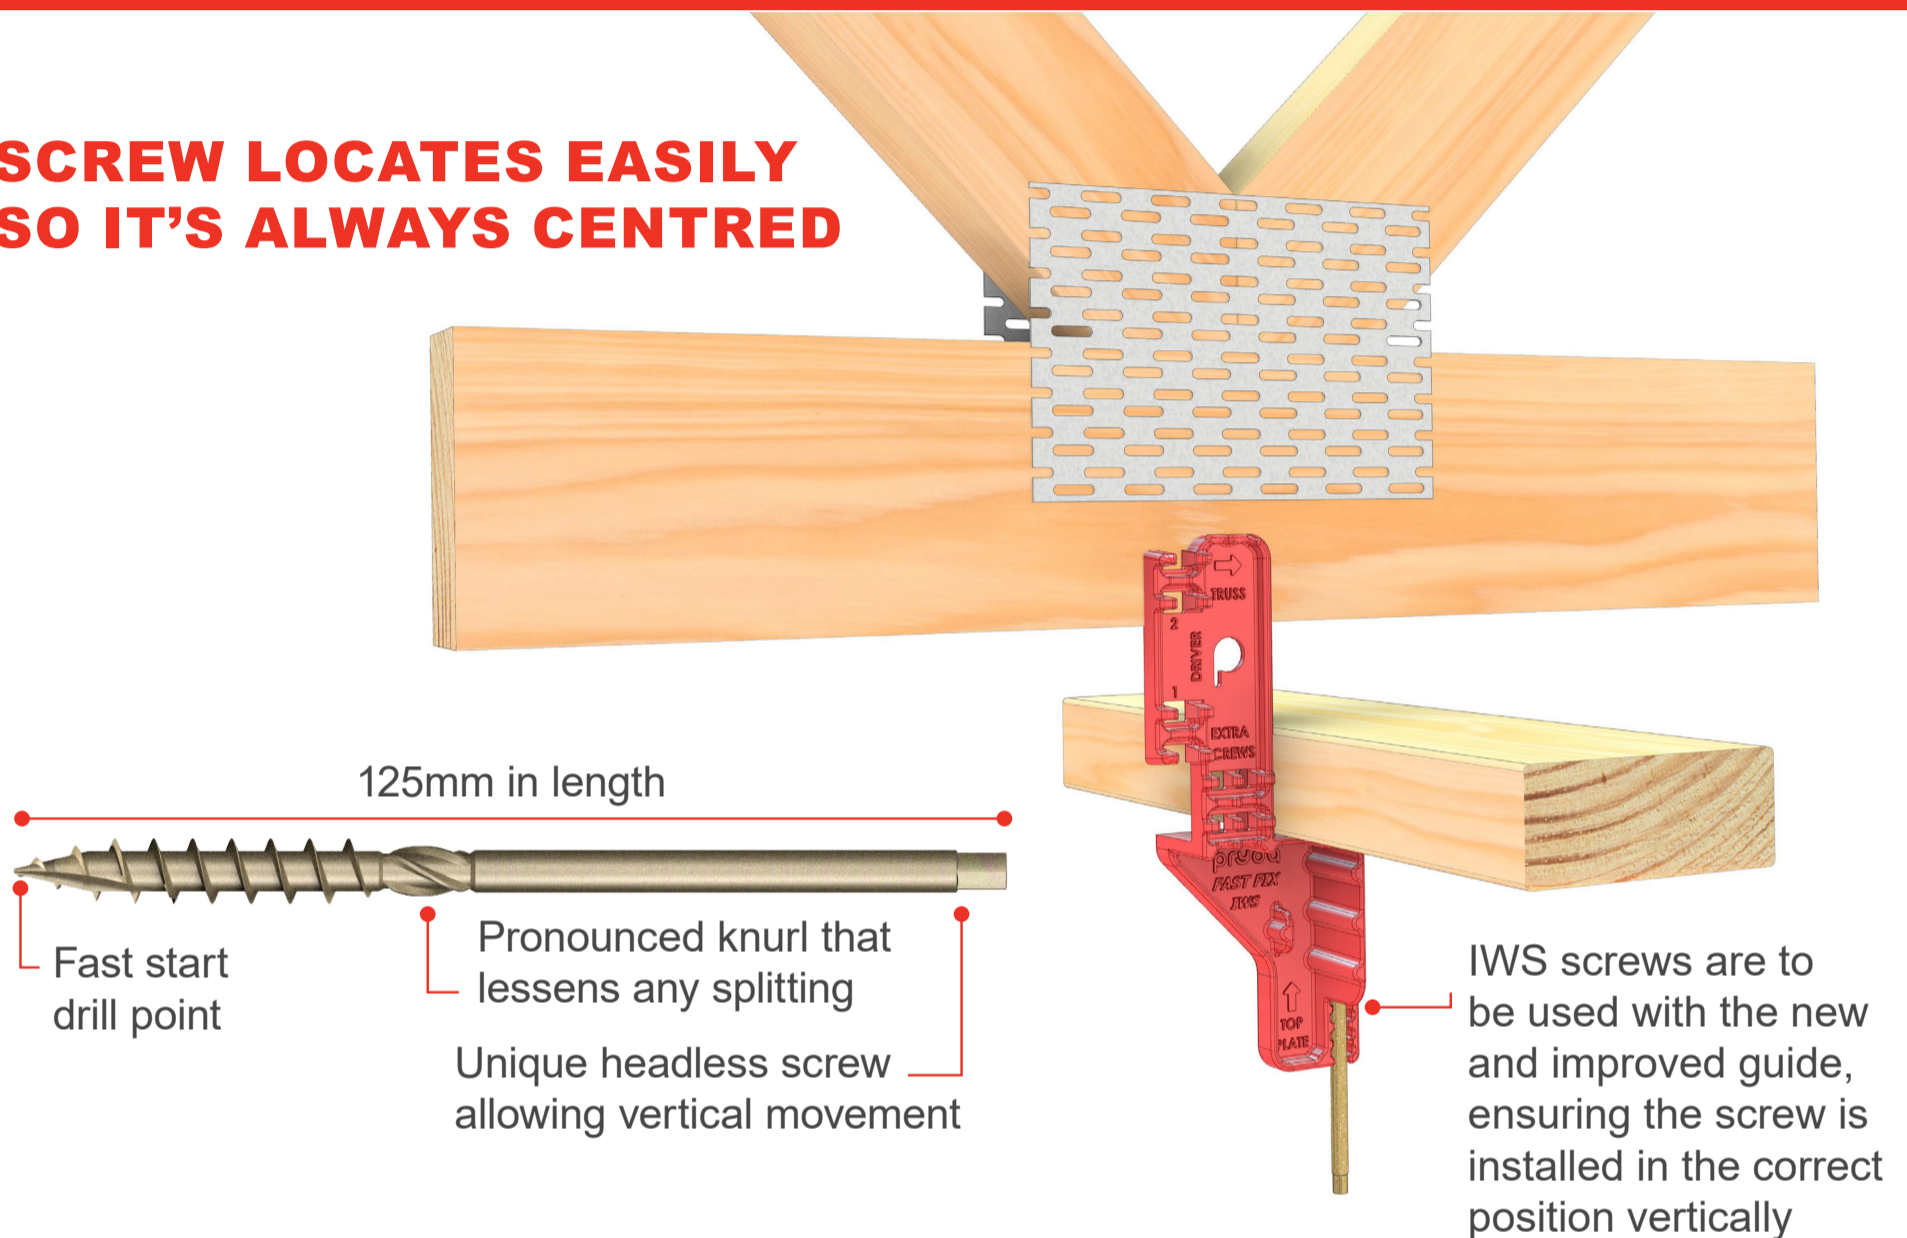

INSTALLATION INSTRUCTIONS



STEP 1
Place the 5mm nutsetter (included in the guide pack) into your drill or impact driver.



STEP 2
Take an IWS and place it within the holding slot on the guide. Using the guide will ensure the screw is positioned in the correct location.



STEP 3
Place the guide to the underside of the wall frame and move the guide until it's resting up against the roof truss. Drive the screw until the nutsetter meets the guide.



STEP 4
Remove the guide once the nutsetter meets the guide and drive the screw home.

SAFER. FASTER. SMARTER. EASIER.

PRYDA.COM.AU | INFO@PRYDAANZ.COM

Scan the QR code for more details

