

**pryda**

***FAST FIX***

**INTRODUCING THE  
INTERNAL  
WALL SCREW**

The FastFix™ Internal Wall Screw (IWS) takes the time and labour out of tedious L Bracket connections, and replaces it with smart thinking, saving you money with a fast, compliant connection.



# **JUST PLAIN EASIER**

**SMARTER CONNECTION - MORE PRECISE  
THAN A CONVENTIONAL L BRACKET**



**ONE-PIECE FIXING - FOR SIMPLE  
AND EASY INSTALLATION PROCESS**



**NO HAND HAMMERING**



**FAST, SAFE, ERROR FREE CONNECTION  
- CANNOT BE OVERDRIVEN**



**LESS TIME WORKING AT HEIGHTS  
- INSTALLED FROM UNDER THE TOP PLATE**



**A JOB THAT USED TO TAKE HOURS  
IS NOW COMPLETE IN MINUTES**

# ONE PIECE FIXING ALLOWS FOR SIMPLE AND EASY INSTALLATION – NO NAILS

125mm in length



Fast start  
drill point

Pronounced knurl that  
lessens any splitting

5mm hex head  
for easy install

## PRODUCT OVERVIEW

The IWS laterally stabilises the tops of internal walls by fixing them to the bottom chord of roof trusses.

The IWS has a knurled shank which ensures the screw is firm laterally against the top plate. The head-less plain shank of the screw in the top plate allows for vertical movement in the truss without transferring load to the wall.

The product is suitable for internal applications only.

### Tooling required:

- Cordless impact driver or equivalent.
- 5mm nut setter or 5mm socket and hex drive adapter.

## PRODUCT SPECIFICATION

### SCREW STEEL GRADE

AISI 1022 grade steel

### SCREW CORROSION PROTECTION

Electroplated zinc coating as per AS 1789 – 2003

### SCREW SIZE


M8 x 125mm with 5mm Internal Hex Drive

### PRODUCT CODE

IWS

pryda

**FAST FIX**

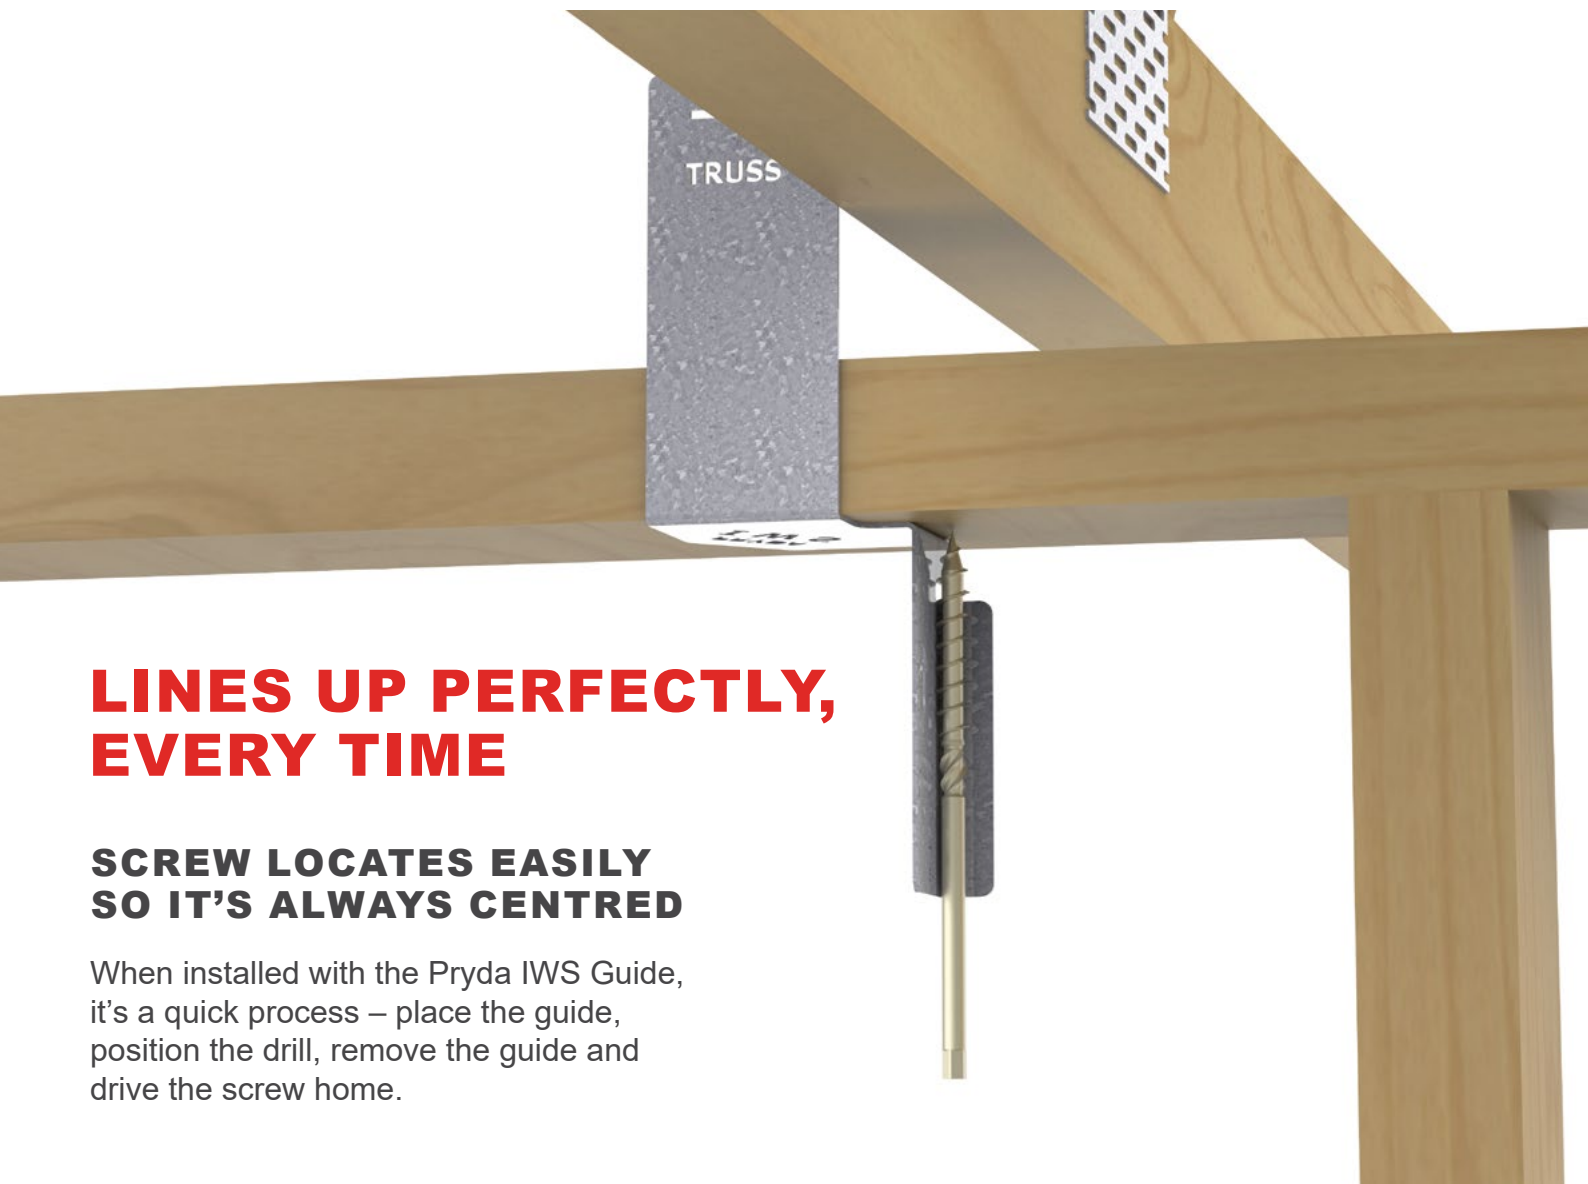

**LINES UP PERFECTLY,  
EVERY TIME**


**SCREW LOCATES EASILY  
SO IT'S ALWAYS CENTRED**

When installed with the Pryda IWS Guide, it's a quick process – place the guide, position the drill, remove the guide and drive the screw home.

# INSTALLATION INSTRUCTIONS



Use the supplied screw guide, so the screw is positioned in the correct location.

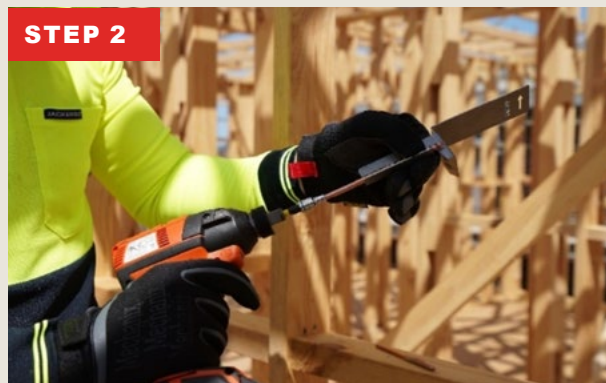

With the guide held in your hand place the screw in the nominated section with thumb located on the threaded part of the screw in a pistol grip hold.



Then locate the truss as shown on the guide and proceed with installation.



Remove the guide and continue to drive screw in one seamless movement, connection is complete when socket meets the top plate.

**pryda**  
**FAST FIX**

Available only from Pryda Fabricators.  
Patents applied for.

**SAFER.  
FASTER.  
SMARTER.  
EASIER.**

**1300 657 052 (AUS)  
PRYDA.COM.AU**

Scan the QR code  
for more details

